

Well done on selecting Snughooks.

The safety features are a vast improvement on the traditional protruding hooks used until now and the people moving around your Snughooks will be much safer.

When you purchase the Original Snughook from Snughooks, you will receive:

- An injection moulded Snughook
- Backing Plate
- Four Screws and wall plugs (for installation into brick)
- Two square drive security screws

You will need a square drive drill bit




Step 1

Grab the backing plate and move it into the desired position for installation. Ensure each section of Snughooks has a secure surface to mount onto. Level the backing plate and then mark the drill hole positions with a pencil.

Step 2


Using the four screws and wall plugs, fix the backing plate to the wall (with one screw going into each corner of the plate).

*When placing more than one hook in a line, please ensure that you leave a 10mm gap between backing sheets to allow the moulded sections to fit next to each other.

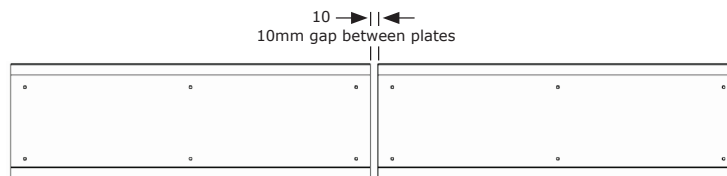

Step 3

Slide the moulded section from the top corner, over both flanges until it sits firmly on the backing plate. Use a soft faced hammer to tap it into position if required.

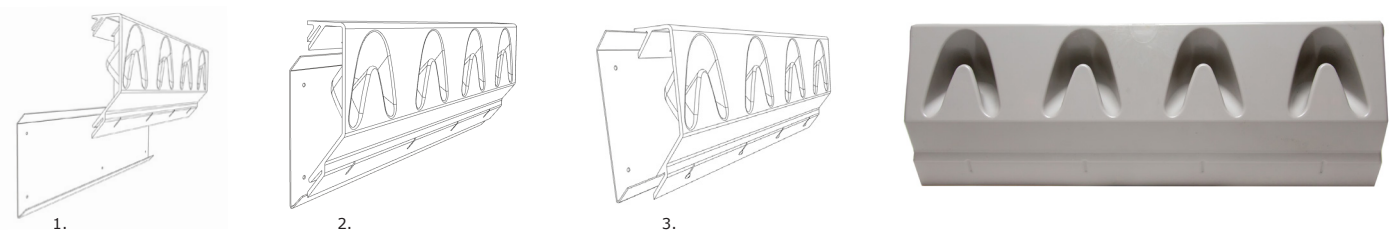

Step 4

Fit two security screws into the pre-drilled holes with a square drive drill bit.

You have now correctly assembled the Snughooks! If you are experiencing any issues, please watch the video, or get in touch with us at sales@snughooks.com

If you require more information or guidance, please watch the video www.snughooks.com/pages/installation

All done! Send us a photo and we'll add it to our stories!